Transmitters

Instructions for models:

315 MHz: M3-2312, M3-2314, M3-3313
916 MHz: M3-2912, M3-2914, M3-3913

Limited Warranty 1 Year

FEATURES

A family of state-of-the-art transmitters, each transmitter is custom encoded and ergonomically designed to be an integral part of your garage door opener system, with two styles to suit your personal preference:

- Mini (2- or 4-channel)
- Micro (3-channel), the smallest transmitter of its kind.

1. Using the Transmitter

All transmitters come with batteries already installed.

- To open or close garage door, press and hold the button (Mini and Micro transmitters have indicator lights). When garage door begins to move release button.
- To stop the garage door during travel, press and hold button until door stops, then release button.
- To continue the garage door travel after stopping it, press and hold the button. Press button once, the door will travel in the opposite direction.

2. Transmitter Mounting (Figure 1)

The transmitters can be conveniently mounted on the wall (fig. 1A) using the mounting plate (optional) or inside your car using the visor clip (fig. 1B). These two mounting alternatives (fig. 1A and fig. 1B) are available with **Mini** models only. The **Micro** can be used with the key ring attachment (fig. 1C).

Mounting Plate (fig. 1A)
The mounting plate enables you to mount the transmitter easily to the wall or other area.

- Secure the mounting plate to area using screw and anchor.
- Slide the transmitter into the mounting plate, which will hold it firmly in place.

Visor Clip (fig. 1B)
The visor clip allows for easy mounting of the transmitter to a car visor.

- Snap visor clip into transmitter.

Note: If you do not need the visor clip, install the visor compartment cover.

Key Ring Attachment (fig. 1C)
The key ring attachment permits easy mounting of the **Micro** to a key ring.

- Open the Micro by using small coin.
- Snap in the key ring attachment.
- Close the transmitter.

3. Battery Replacement (Figure 2)

The installation of the battery for **Mini** and **Micro** is the same. When replacing batteries follow the steps below:

- Open the transmitter by using small coin.
- Insert a 3V battery (type CR2032) as shown.
- Close the transmitter.

Note: Replace batteries with same type only.

Figure 1. Mounting Plate & Visor Clip

fig. 1A

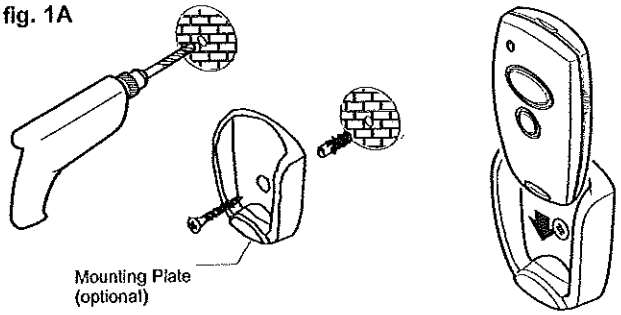

fig. 1B

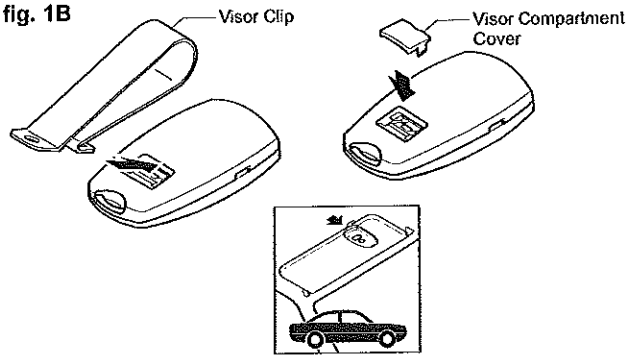

fig. 1C Key Ring Attachment for Micro Transmitter

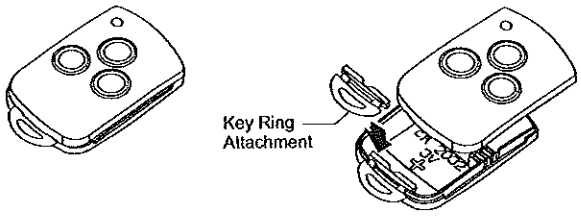

Figure 2. Battery Compartment